

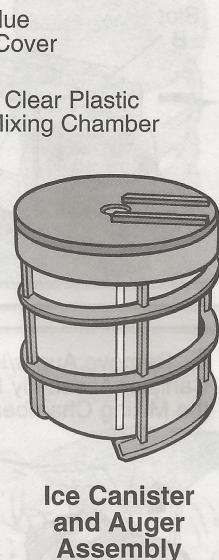
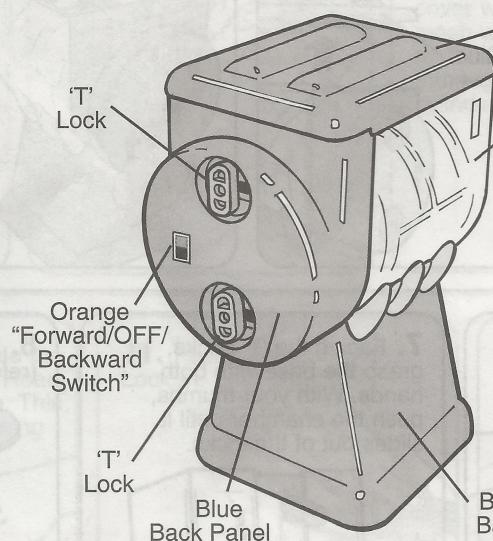
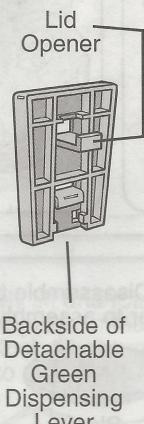


INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO ASSEMBLING AND USING YOUR SLURPEE™ DRINK MAKER. PARENTAL SUPERVISION RECOMMENDED.

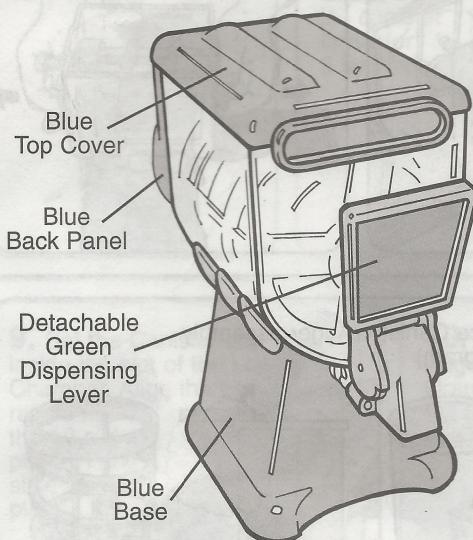

NOTE: THE DISPENSING LEVER IS DETACHABLE AND CAN BE USED AS A TOOL TO OPEN THE CANISTER COVER.

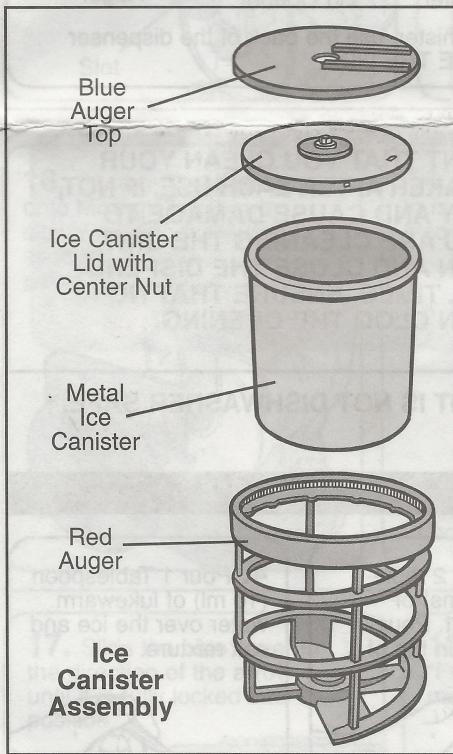

WHAT YOU WILL NEED FROM HOME:

- 4 C Alkaline Batteries
- 1 Tablespoon of lukewarm water
- 1 Spoon for removing any leftover SLURPEE™ drink from Mixing Chamber
- 2 Tablespoons of table salt (30 grams)

- Ice cubes (enough to fill the Ice Canister). NOTE: Smaller cubes or crushed ice work best.
- One 12 oz (355 ml) can of soda or fruit punch or juices high in sugar (i.e. grape juice)
- Oven mitts


Battery Installation

Turn the unit over and unscrew the battery door with a Phillips screwdriver.

Insert 4 C Alkaline Batteries.

Replace the cover and retighten the screws.

Turn the unit right side up.

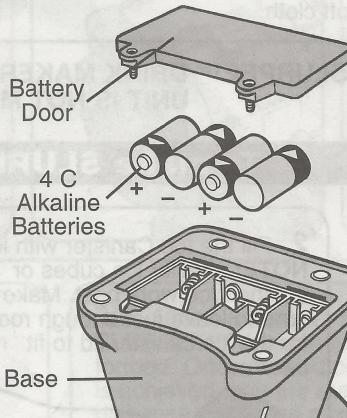

These directions will make one SLURPEE™ drink, enough to fill 1 cup.

NOTE: THE SLURPEE™ DRINK MAKER PERFORMS BETTER AND CREATES BETTER END RESULTS WHEN THE DRINK USED IS COLD AND CONTAINS SUGAR. DRINKS WITH A LOW SUGAR CONTENT, DIET DRINKS AND DRINKING WATER DO NOT WORK.

CLEANING YOUR SLURPEE™ DRINK MAKER


BEFORE USE, CAREFULLY DISASSEMBLE AND WASH ALL PARTS THAT MAY COME INTO CONTACT WITH FOOD. DO THIS BEFORE AND AFTER EACH USE.

IT IS VERY IMPORTANT THAT YOU CLEAN YOUR SLURPEE™ DRINK MAKER AFTER EACH USE. IF NOT, THE LIQUID WILL DRY AND CAUSE DAMAGE TO THE UNIT. WHEN YOU ARE CLEANING THE UNIT, MAKE SURE TO OPEN AND CLOSE THE DISPENSING LEVER SEVERAL TIMES AND THOROUGHLY CLEAN. NOTE: SUGAR RESIDUE CAN CLOG THE OPENING.


NOTE: DO NOT PLACE THE SLURPEE™ DRINK MAKER IN A DISHWASHER. IT IS NOT DISHWASHER SAFE. UNIT IS NOT MICROWAVE SAFE.

How to disassemble your SLURPEE™ Drink Maker


1. Slide the blue cover in the direction of the arrow to release the lock.

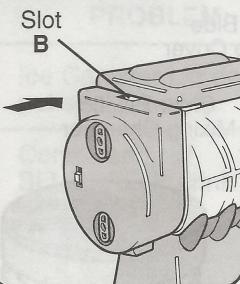


2. The blue cover can now be lifted off the mixing chamber.

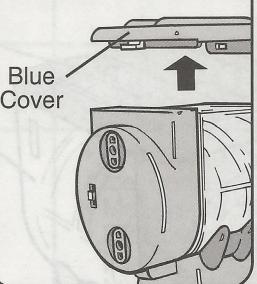


3. Turn 'T' Locks counter clockwise.

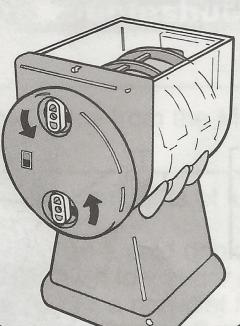


4. Remove Blue Back Panel.

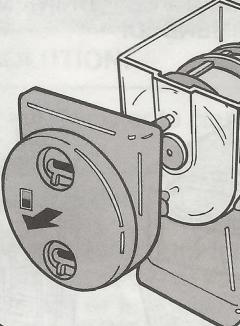


5. Pull Out Orange Knobs to unlock canister.

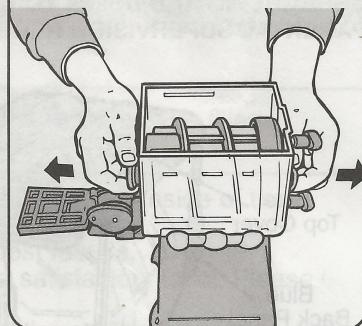


6. Remove Auger/Ice Canister Assembly from the Mixing Chamber.

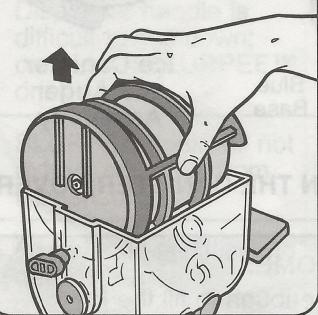

7. Facing the 'T' Locks, grasp the base with both hands. With your thumbs, push the chamber until it slides out of the locks.

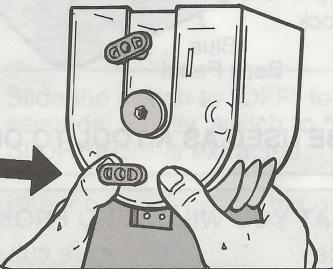

8. Disassemble the Ice Canister/Auger assembly. (refer to assembly diagram)

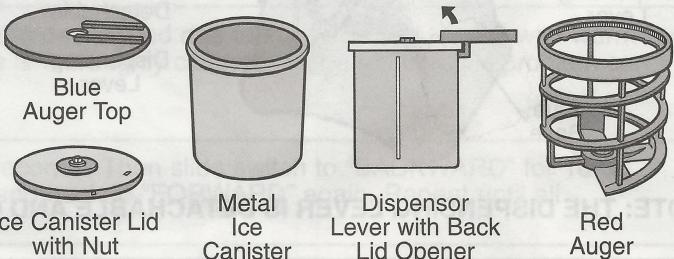

To pry the lid off of the canister, use the back of the dispenser lever as a tool to REMOVE THE LID.

9. DO NOT WASH THE BASE OR BLUE BACK PANEL OR SUBMERGE IN WATER SINCE THEY CONTAIN BATTERIES AND MOVING PARTS.


- Wipe the BASE and BLUE BACK PANEL with a damp cloth.
- Wash all other parts EXCEPT THE BASE and BACK PANEL completely with warm soapy water.
- Rinse thoroughly with warm water.
- Completely dry all parts with a soft cloth.

IT IS VERY IMPORTANT THAT YOU CLEAN YOUR SLURPEE™ DRINK MAKER AFTER EACH USE. IF NOT, THE LIQUID WILL DRY AND CAUSE DAMAGE TO THE UNIT. WHEN YOU ARE CLEANING THE UNIT, MAKE SURE TO OPEN AND CLOSE THE DISPENSING LEVER SEVERAL TIMES. ENSURE THAT NO SUGAR RESIDUE CAN CLOG THE OPENING.

NOTE: DO NOT PLACE THE SLURPEE™ DRINK MAKER IN A DISHWASHER. IT IS NOT DISHWASHER SAFE. UNIT IS NOT MICROWAVE SAFE.


To make SLURPEE™ drinks

1. Re-attach the Mixing Chamber to the base and lock in. Turn the dispensing handle to the closed position to avoid spilling drink.

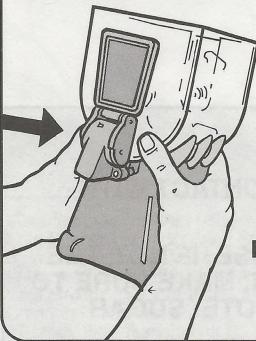

WARNING:
DO NOT
PLACE
FINGERS
INSIDE OF
DISPENSING
HOLE.

2. Fill the Ice Canister with ice.
NOTE: smaller ice cubes or crushed ice work best. Make sure to leave just enough room for the ice canister lid to fit back on.

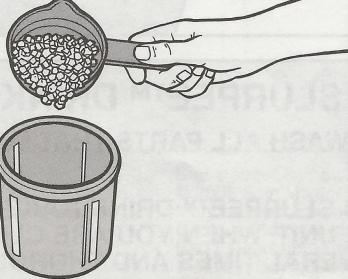

3. Measure out 2 tablespoons (30 grams) of regular table salt. Pour the salt evenly on top of the ice.




4. Pour 1 Tablespoon (10 ml) of lukewarm water over the ice and salt mixture.




CAUTION: THE ICE CANISTER AND THE ICE AND SALT MIXTURE INSIDE OF THE ICE CANISTER DROPS TO BELOW FREEZING TEMPERATURES. AVOID CONTACT WITH BOTH OF THESE UNITS.

Making SLURPEE™ drinks con'd


5. Place the Ice Canister lid securely on the ice canister.
NOTE: Use Oven mitts as cylinder will get very cold!

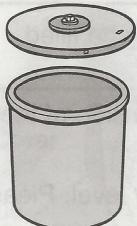

6. Using a towel or oven mitts to protect your hands, pick up the Ice Canister while securing the top with your thumbs. Shake the ice canister firmly for 5 seconds.

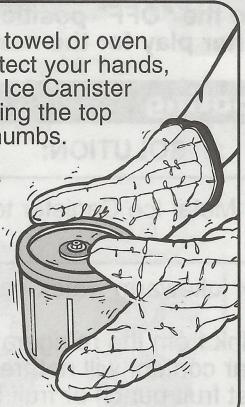


7. Place the Ice Canister inside the Auger.

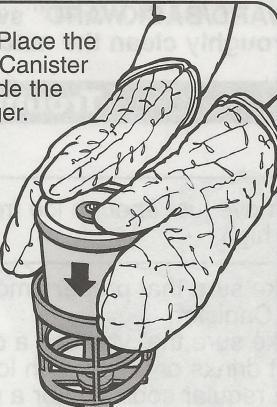


8. Place the Blue Cover on the Auger. The white gears in the cover will mesh with the teeth inside the Auger cylinder.




9. Set the Canister and Auger inside the slot of the Mixing Chamber. Align the two raised ribs at the 12 o'clock position and slide into place.

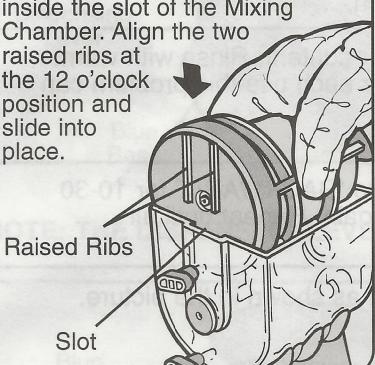


10. Slowly lift and rotate the Auger and press in the Rear Orange Knob till secure. This will help to align the turning gears.

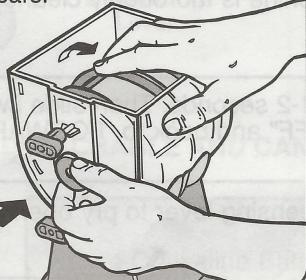


11. Push Orange Front Lock In.

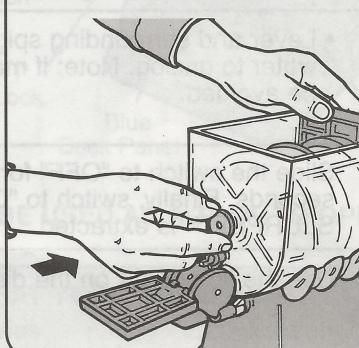


12. Pull dispenser lever back to "UP" position.

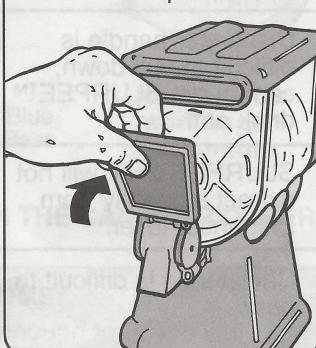

13. Secure Blue Back Panel onto Mixing Chamber by slowly rotating the Auger to align the turning gears.

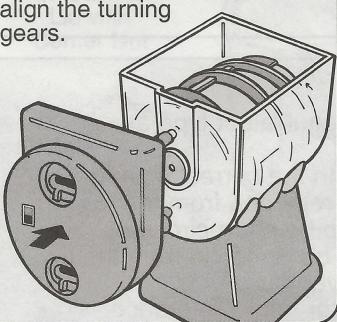


14. Turn 'T' Locks Clockwise to lock Blue Back Panel in place.

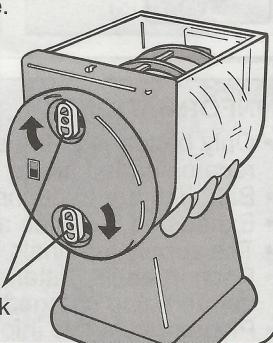


15. Pour in one 12 oz can (355 ml) of soda or juice.




16. Align key A to slot B in the top of the blue back panel and slots C (to be covered with label) with the locking pins D on the front of the mixing chamber.

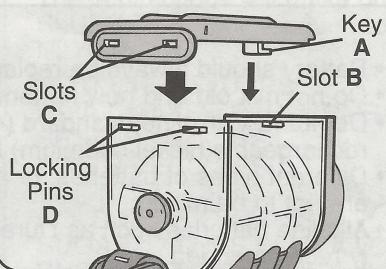

17. Slide the blue cover in the direction of the arrow until it is fully locked into position.

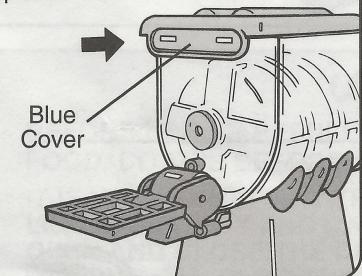


18. Slide Orange Switch to "FORWARD" position to turn mixer ON.

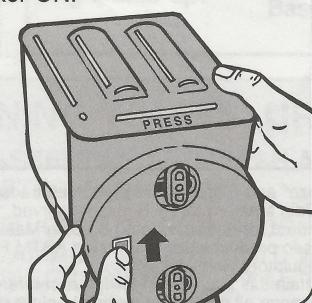

19. After 5-8 minutes the SLURPEE™ drink should be formed. Once desired consistency is achieved, you are ready to dispense. Keep the mixer running during dispensing.

20. Place one hand on top of the machine to keep it steady. Pull the dispensing lever all the way down to fill your cup. Any leftover SLURPEE™ drink can be removed by using a spoon.

ENJOY!!

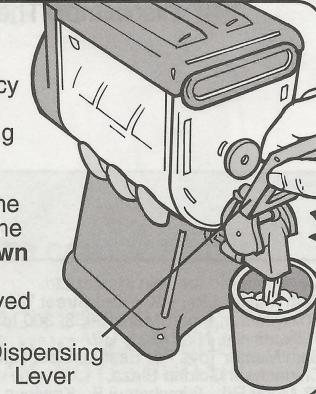


NOTE: Forming time for SLURPEE™ drink can vary upon the freshness of the ice. The more frozen the ice, the less time it will take. If the ice has been left out, it may take longer to form the SLURPEE™ drink.

After play

**Be sure to turn the "FORWARD/BACKWARD" switch to the "OFF" position to preserve your batteries!
Thoroughly clean the machine after play for the next time!**

Troubleshooting

PROBLEM:	SOLUTION:
Ice Canister Lid does not seal properly.	<ul style="list-style-type: none"> Remove just enough ice from the Metal Ice Canister to close the lid. It may be filled too high.
Consistency of SLURPEE™ drink is very liquidy.	<ul style="list-style-type: none"> Make sure that proper amounts of lukewarm water, salt and ice were put inside of the Ice Canister. Make sure that you use a cold drink from the refrigerator for best results. Diet drinks or drinks with low sugar content will not freeze to a satisfactory level. Please use regular soda pop or a non-diet fruit punch or fruit juice. Make sure to leave the Orange Switch in the "FORWARD" position while mixing the SLURPEE™ drink for at least 8 minutes before trying to dispense.
Ice Canister and Auger stops spinning.	<ul style="list-style-type: none"> Slide switch to "OFF" first. Then slide to "BACKWARD" for 10-30 seconds. Pause at "OFF" before sliding switch back to the "FORWARD" position.
Dispenser handle is difficult to pull down; cannot get SLURPEE™ drink out.	<ul style="list-style-type: none"> Lever and surrounding spigot could be clogged due to sugar content. Rinse with warm water to unclog. Note: if machine is thoroughly cleaned after each use this problem can be avoided.
SLURPEE drink will not extract smoothly from Dispenser lever.	Slide the switch to "OFF" for 1-2 seconds. Then slide switch to "BACKWARD" for 10-30 seconds. Finally, switch to "OFF" and back to "FORWARD" again. Repeat until all SLURPEE™ is extracted.
Canister lid is difficult to open.	Use the lid opener on the dispensing lever to pry open the lid as shown in the picture.

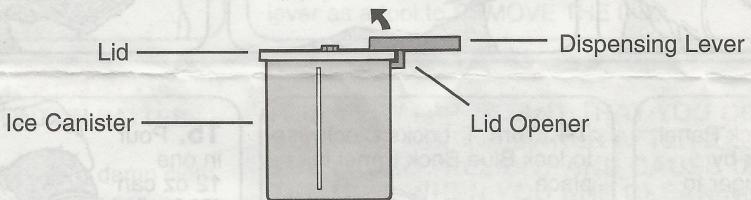

BATTERY SAFETY INFORMATION:

- Battery should always be replaced by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable(nickel-cadmium) batteries.
- Different types of batteries, or new and used batteries are not to be mixed.
- Alkaline batteries such as Duracell or Energizer are highly recommended.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Please retain this information for future reference.

Disclaimer: The end results from this toy are not an exact representation of a real SLURPEE™ drink.

Manufactured for Spin Master Ltd.
Spin Master Ltd., 450 Front Street West, Toronto, ON M5V 1B6 Canada
Spin Master, Inc., PMB #10053, 300 International Drive, Suite 100,
Williamsville, NY 14221, USA
Spin Master Toys Far East Limited, Rm # 1113, 11/F,
Chinachem Golden Plaza,
77 Mody Rd., Tsimshatsui E., Kowloon, HK
Spin Master France SAS, 36 rue de Selly, 92100 Boulogne, France

Brainfreeze® and Slurpee® are registered trademarks of 7-Eleven, Inc.
© 2005 Spin Master Ltd. All Rights Reserved.
Manufactured for and distributed by Spin Master Ltd.
Conforms to product safety standards ASTM F963-03,
EN71 Regulatory Requirements.
Please retain this information for future reference.
Please remove all packaging material before giving
to children. Products and colors may vary.
MADE IN CHINA.

North American Consumer Information
Phone: 1-800-622-8339
www.spinmaster.com

Item #70752 REV 2A US English

